

The background of the page is a dark grey color. A white line-art outline of an acoustic guitar is centered on the page. The Ibanez logo is written in a large, white, cursive script across the upper part of the guitar's body. Below the logo, the words "IBANEZ ACOUSTIC GUITAR" are written in a smaller, white, sans-serif font. The guitar outline shows the neck, fretboard, headstock, and the body with the soundhole and bridge area.

Ibanez

 
IBANEZ ACOUSTIC GUITAR

Preamp Information

Ibanez Custom Electronics w/

Undersaddle Pickup Volume, Undersaddle Pickup Tone and Contact Pickup Volume

WWW.IBANEZACOUSTIC.COM

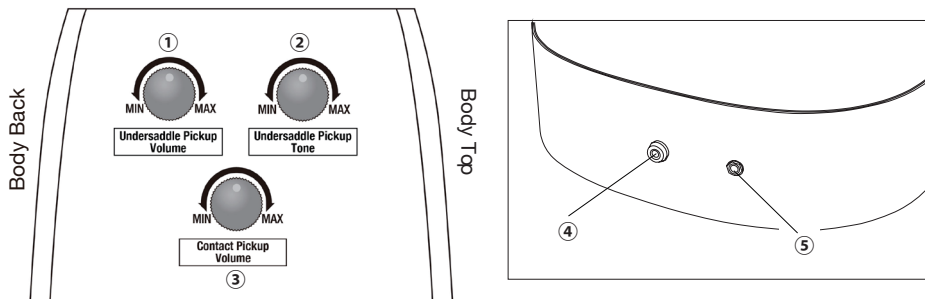

Basic Controls

① Undersaddle Pickup VOLUME

Adjusts the volume of the Undersaddle Pickup.

② TONE

 
This adjusts the sound quality of the Undersaddle pickup. In the center position (the knob position shown in the figure) flat, turn the knob clockwise to boost the high range, and counterclockwise to boost the low range.

③ Contact Pickup VOLUME

Adjusts the volume of the Contact Pickup.

④ Endpin Output Jack

⑤ 1/4" Output Jack

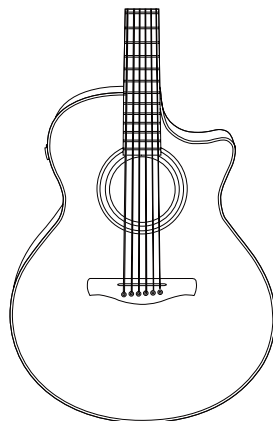

MIX : Undersaddle Pickup + Contact Pickup

Fig.1

 
■ Monaural Output (Fig.1)

When only plugged in to the Endpin Output Jack ④, the signals of the Undersaddle Pickup and Contact Pickup are mixed to produce monaural output. You can adjust the volume of each pickup using the onboard control knobs installed on the side.

■ Stereo Output (Fig.2)

When plugged into both output jacks ④ and ⑤, the signals of the Undersaddle Pickup ④ and the Contact Pickup ⑤ output separately. You can adjust the volume of each pickup using the onboard control knobs installed on the side.

※ If the plug is only connected to the 1/4" jack ⑤, no sound will be output.

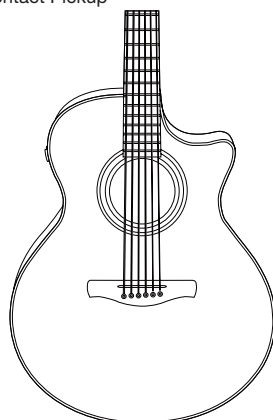

Undersaddle Pickup
Contact Pickup

Fig.2



■ Replacing the batteries

1. Press the tab on the battery case and remove the old battery.
2. Insert the new 9V battery (006P type) into the battery case from the electrode side. Since there is no + (positive) and - (negative) polarity in the battery box, either \pm orientation of the battery is acceptable.
3. Close the battery case until the lid makes a click sound.

■ Battery Tester

When you plug in a guitar, the battery tester will activate; the LED will flash one time in red if there is adequate battery power, and will light in red if the battery power is too low.



NOTE

The battery used with the Pre-Amp needs to be replaced regularly. The battery needs to be replaced in situations such as the following:

- Deterioration in sound quality or reduction in volume
- A low battery warning is displayed

Also, be sure to remove the plug from the output jack when not using a guitar in order to prevent unnecessary damage to the battery.

- ※ The included battery is for confirming proper operation of the Pre-Amp at the factory, and may have a short lifespan.
- ※ Discard of used batteries in accordance with local laws and regulations.
- ※ The specifications and appearance of this product are subject to change without notification for the purpose of improvement.

