

## SR

- A: Intonation adjustment screw
- B: Saddle height adjustment screw (B10/B15/B16, B120/B125/B126, B300/B305/B306, MR4: 2.0mm hex key wrench) (B500/B505/B506, MR5, MR5S: 1.5mm hex key wrench)
- C: Saddle lock screw (2.0mm hex key wrench)
- D: Slid-able saddle lock screw (1.5mm hex key wrench)


#### B10/B15/B16

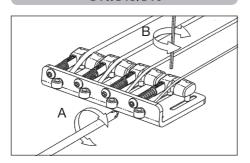


#### B120/B125/B126

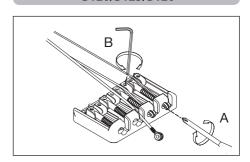


B300/B305/B306

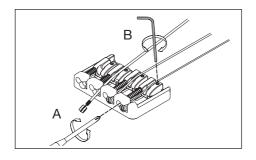


B500/B505/B506

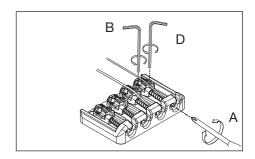


MR4

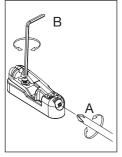


 

#### MR5

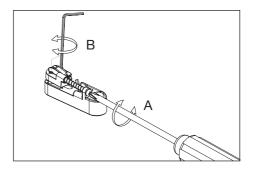


#### MR5S

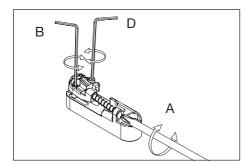

# STRING REPLACEMENT

#### MR4

 Slide the ball end into the ball end pocket.



### MR5/MR5S

Hook the ball end below the string catch at the rear of the bridge.

