
## **BACKSTOP INSTRUCTION**




Turn the shaft length adjustment knob 1 in the direction shown by the arrow. Turn it till the tip of the shaft reaches to the end of the base plate of the BACKSTOP (2).

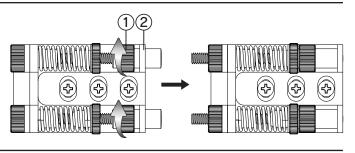




Turn the spring tension adjustment knob (3) in the direction shown by the arrow until it stops turning, while holding the shaft length adjustment knob (1) in the place.

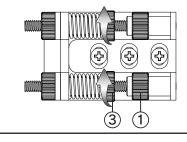



 
Tune the guitar. Make sure that the tremolo bridge is set parallel to the surface of the guitar.






Turn the shaft length adjustment knob ① in the direction shown by the arrow until it touches the tremolo block, while keeping the spring tension adjustment knob ③ in the place.

By using a screwdriver, turn the tremolo spring adjustment screw several times clockwise. (To get maximum tuning stability, even if breaking a string, completely loosen the string that you normally break. After the tremolo spring adjustment, retune the remaining strings to pitch.)

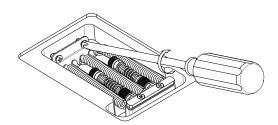



 Adjust the spring tension adjustment knob ③ while holding the shaft length adjustment knob ① in the place to achieve the adequate spring tension from the BACKSTOP.



\*BACKSTOP equipped on JEM777 is to set to the signature artist's specification and shipped.

