

PRODUCT SPECIFICATIONS

Table with 2 columns: Specification Name and Value. Includes Power supply (9V battery), Tempo range (30-250/minute), Beats (0-9), Displays (LCD), Speaker (x1), and Accessories (Soft case).

- * Design and specifications are subject to change without notice for improvement of the product.
* Design und Technische Daten können sich zwecks Verbesserung des Produkts ohne Ankündigung ändern.
* Afin d'améliorer le produit, les caractéristiques et le design sont susceptibles d'être modifiés sans préavis.

CE EU REPRESENTATIVE: HOSHINO EUROPE B.V. Constructieweg 7, 3641 SB Mijdrecht, The Netherlands

FEDERAL COMMUNICATIONS COMMISSION RADIO FREQUENCY INTERFERENCE STATEMENT
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

OWNER'S MANUAL BEDIENUNGSANLEITUNG MANUEL DE L'UTILISATEUR MANUAL DEL USUARIO MANUALE D'ISTRUZIONI INSTRUKCJA OBSŁUGI MANUAL DO PROPRIETÁRIO 取扱説明書 РУКОВОДСТВО ПОЛЬЗОВАТЕЛЯ

ENGLISH

Before using this device, be sure to read this manual thoroughly for safe use of it. After that, keep this manual in a safe place and read it whenever necessary.


Safety Precautions — Be sure to observe the following precautions —

- The severities of the injury and damage due to incorrect usage by ignoring the written contents are explained by the following classified indications.
Warning: Indicates a potentially hazardous situation which, if not avoided, will result in death or serious injury.
Cautions: Indicates a potentially hazardous situation which, if not avoided, will result in injury or property damage.

Warnings table with 2 columns: Symbol and Description. Includes symbols for fire, heat, and electric shock.

Cautions table with 2 columns: Symbol and Description. Includes instructions for AC adapter, power plug, and cleaning.

Warnings table with 2 columns: Symbol and Description. Includes instructions for battery disposal.

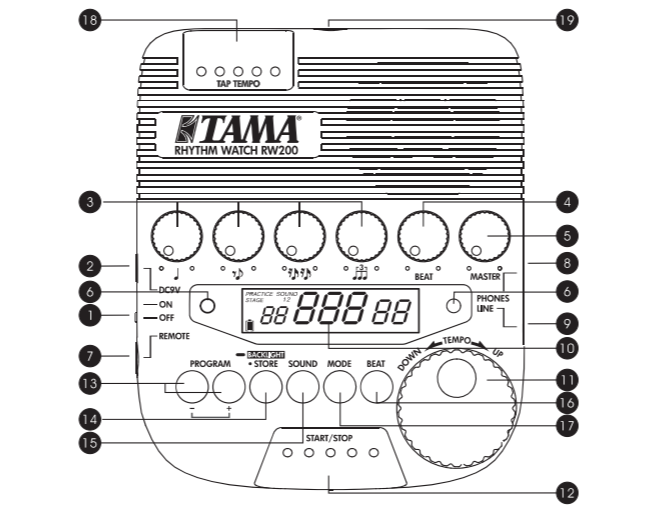

Thank you for purchasing the Rhythm Watch RW200. Please read this manual carefully before using your product, in order to take full advantage of its many features and functions, and be sure to store the manual in a safe place for future reference.

FEATURES

The Rhythm Watch RW200 is a metronome designed for a broad spectrum of musical activities ranging from practice to live performance. Frequently used controls and displays are especially large for fast and accurate operation. Key functions include: Stage Mode, Program Function, Independent Tap Key.

PRECAUTIONS

- * Avoid subjecting the RW200 to impact, such as dropping it or handling it roughly.
* Turn off the power before storing the RW200.
* Storage or use of RW200 that subjects the unit to direct sunlight, high temperature, or humidity can cause the RW200 to malfunction or fail permanently.

REPLACING THE BATTERY

When the battery begins to run down, the LCD and the LED darkens, and sound weakens. When the bar of the battery level indicator on LCD disappears, performance will rapidly deteriorate. Replace battery promptly. Note: Heavy use of the backlight will run batteries down quickly.

- Battery Replacement Procedure: 1. Slide the battery cover on the back of the RW200 in the direction indicated by the arrow in the diagram, and take off the battery cover. 2. Take out the old battery and insert the new one. 3. Slide the cover in the opposite direction from that indicated by the arrow, attaching the cover in its original position.

Automatic power-off function: The RW200 has an automatic power-off function to avoid unnecessary battery power drainage. If the RW200 is powered without being operated for approximately one hour, the power will automatically turn off.

This auto-off feature can be disabled by doing the following: Turn the POWER on while simultaneously pushing START/STOP key. LCD will first display "OFF." Continue to hold buttons until normal display screen appears.

Memory backup: The RW200 incorporates a flash-memory device that saves programs semi-permanently without power supply.

Using the backlight

- 1. The backlight will be turned on when you operate the POWER switch, control knobs/switches, or the TEMPO dial, and stay on for approximately 10 seconds from the last operation.
2. The backlight is enabled in the above conditions by default. If the backlight is unnecessary, it can be disabled by pressing BACKLIGHT/STORE key for approximately 2 seconds.

NAMES AND FUNCTIONS OF PARTS

- 1 POWER switch: This is used to turn the power supply on and off.
2 DC IN jack: This is the jack to which the AC adaptor is connected.
3 RHYTHM knobs: These are used to control the volume balance between the various sounds.
4 BEAT knob: This is used to control the volume of the beat sound.
5 MASTER knob: This is used to control the overall volume.
6 TEMPO LEDs: The left LED flashes red in time with the initial beat. The right LED flashes green in time with the second and after beats.

- 7 REMOTE jack: This is the stereo jack to which the foot switch is connected.
8 LINE jack: This is the 1/4" monaural jack that outputs line level signal.
9 LCD (liquid crystal display): This displays the values set for the "PROGRAM," "SOUND," "MODE," "BEAT," and "TEMPO" parameters.

- 10 TEMPO dial: This is used to control the tempo between 30 ~ 250/minute.
11 START/STOP key: This key starts and stops the metronome.
12 PROGRAM keys: These are used to load programs.
13 BACKLIGHT/STORE key: This stores the parameter settings except MODE shown on the LCD.
14 SOUND key: This selects a sound, SOUND 1 or SOUND 2.
15 BEAT key: The beat can be set within a range from 0 to 9 beats.
16 MODE key: This selects a mode, PRACTICE mode or STAGE mode.
17 TAP TEMPO key: TAP function starts working and measuring tempo automatically when this key is pressed at least 5 times.

OPERATION

Operating the program function: The RW200 stores up to 30 program numbers of beats, sounds and tempos. 1. Using the PROGRAM key or the optional REMOTE footswitch, bring up the program number in which the beat or tempo is to be stored. 2. Set the beat, sound and tempo. 3. Check the contents displayed on the LCD and press the STORE/LIGHT SET key.

- Metronome Operation - PRACTICE Mode: This is a default mode that works as a metronome for practice. 1. Press the MODE key and select PRACTICE mode. 2. Press the SOUND key and select either SOUND 1 or SOUND 2. 3. Set the tempo using the TEMPO dial, and the beat using the BEAT key.

- Metronome Operation - STAGE Mode: Programming beforehand tempos, beats, and sound of each song in the exact order of set list you play in live stage, it will be useful for you when starting songs with count-in. 1. Press the MODE key and select STAGE mode. 2. Call the program of your first song. 3. Pressing the START/STOP key to start the metronome.

Operating the tap function: The tap function lets you measure any desired tapped tempo and applies to the tempo of metronome. 1. Enter the tempo by pressing the TAP TEMPO key with following rhythm. 2. When you tap 6 times or more, it displays average tempo of the last 4 taps. 3. If you don't push the TAP TEMPO key for approximately 2.5 seconds, tempo measurement will finish and tempo value on the LCD display flashes. 4. If the measured tempo exceeds the range of 30 ~ 250/minute, error messages are displayed.

Factory reset: Turn the power on with pressing BACKLIGHT/STORE key.

FRANÇAIS / MANUEL DE L'UTILISATEUR
ITALIANO / MANUALE D'ISTRUZIONI
РУССКИЙ / РУКОВОДСТВО ПОЛЬЗОВАТЕЛЯ
PORTUGUÊS / MANUAL DO PROPRIETÁRIO



http://www.ibanez.com

