

A white line-art illustration of an acoustic guitar is centered on a dark gray background. The guitar is shown from a front-three-quarter view, with the neck extending upwards and the body curving downwards. The fretboard has several frets and two circular inlays. The soundhole is visible, and the bridge is at the bottom with six tuning pegs. The Ibanez logo is superimposed over the upper part of the guitar's body.


Ibanez

IBANEZ ACOUSTIC GUITAR

プリアンプ・インフォメーション
AEQ-SP1

WWW.IBANEZACOUSTIC.COM

AEQ-SP1

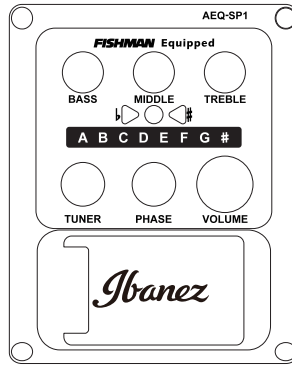

AEQ-SP1

機能説明

VOLUME

Pre-Amp 全体の音量を調節します。

TREBLE

高音域をブースト / カットします。

MIDDLE

中音域をブースト / カットします。

BASS

低音域をブースト / カットします。

PHASE

フィードバックが起こった場合に、位相を逆にしてフィードバックをやわらげることができます。

チューナー機能説明

TUNER ON/OFF SWITCH

このボタンを押すことでチューニングメーターの ON/OFF が切り替わります。ON に切り替えてから 5 分経過すると、自動的に OFF になります。

NOTE INDICATER LED



入力した音に最も近い音名が LED で表示されます。G # などの # (シャープ) がつく音名の場合は右端の # も同時に点灯します。点灯した音名が望むものとは異なる場合は、希望する音名が点灯するまで弦を緩めるかまたは巻き上げてください。巻き上げ過ぎると弦が切れることがありますのでご注意ください。

TUNING GUIDE LED

チューニングが合うと中央の緑の LED が点灯します。ギターの音が低い場合は左の赤い LED が点滅し、高い場合は右側が点滅します。音名表示の LED が希望する音名で点灯していることを確認して、中央の緑の LED (○の位置) だけが点灯するようにチューニングを調整してください。

ご注意

プリアンプに使用する電池は定期的に交換が必要です。

- ・音質の劣化や音量の低下
- ・チューニングメーターを ON にしても、チューニングに反応しない
- ・チューニングメーターを ON にしても、LED が作動しない

などの場合は電池の交換が必要です。また、電池の無駄な消耗を防ぐために、ギターを使わない間はプラグをアウトプットジャックから抜いておいてください。

※使用済みの電池は、自治体の条例または取り決めなどに従って廃棄してください。

※仕様及び外観は改良の為に予告なく変更することがあります。

