

A dark gray background featuring a white line-art illustration of an acoustic guitar. The guitar is oriented vertically, with the neck at the top and the body at the bottom. The body is shown in profile, with the sound hole and bridge clearly visible. The strings are depicted as thin lines extending from the bridge to the neck. The overall style is minimalist and elegant.

Ibanez

IBANEZ ACOUSTIC GUITAR


プリアンプ・インフォメーション
Ibanez Custom Electronics (AHA1)

WWW.IBANEZACOUSTIC.COM


Ibanez Custom Electronics (AHA1)

各部の名称


Ibanez Tバーアンダーサドルピックアップ



エンドピン一体型プリアンプ

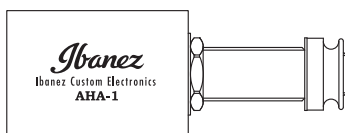

バッテリーボックス

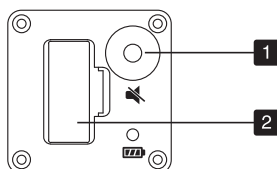

① ミュートスイッチ/バッテリーチェッカー

本体をアンプやスピーカーに接続しているとき、このボタンをONにするとミュート(消音)状態になります。同時にバッテリーチェック機能も備えており、電池の残量があればバッテリーチェッカーのLEDが一度だけ赤く点滅し、電池の寿命が近付いているときはLEDが赤く点灯したままになります。ギターをアンプ(又はスピーカー)に接続していない場合も、このボタンをONにすることでバッテリーチェックが可能です。

② バッテリーホルダー

電池の交換について

1. バッテリーケースのツメを押して、バッテリーホルダーを引き抜きます。
2. バッテリーホルダーから古い電池を取り出し、新しいコイン型リチウム電池 CR2032 (3 V) 2個と交換してください。バッテリーホルダー側面の表示に従って、電池の+(プラス)と-(マイナス)を正しくセットしてください。
3. バッテリーホルダーをバッテリーケースに戻し、カチッと音が鳴るまで押し込んでください。

※電池交換の際は必ず2個とも新品に交換し、古いものと新しいものが混在しないようにしてください。

※ギターの音が歪んだり音量が上がらなくなったりする、バッテリーチェックのLEDが点灯している、このような場合は電池が消耗していますので、電池の交換が必要です。

※使用済みの電池は、自治体の条例または取り決めなどに従って廃棄してください。

仕様

- ピックアップ：Ibanez Tバーアンダーサドルピックアップ
- コントロール：ミュートスイッチ/バッテリーチェッカー
- 出力ジャック：エンドピン/電源スイッチ兼用
- 出力インピーダンス：2.2k Ω
- 電源：コイン型電池 CR2032 (3 V) 2個
- 連続使用時間：約 240 時間 (使用状態によって異なります。)

※仕様及び外観は改良の為に予告なく変更することがあります。

